



**Master Code Default [2][5][8][0]**

**Installer Code Default [1][2][3][4]**

**1 Show Fault/Trouble Condition**

- Main screen > press & hold [5]
- Use arrows to scroll & [-] to exit

**2 Default the Panel**

- Remove power (PSU & battery).
- Press & hold DEFAULT button on PCB for 5 secs while reconnecting power

**3 Set the System Time & Date**

- Main screen > Master Code then [6][#]
- Enter Date & Time using number keys
- [#] to save or [\*] to exit

**6 Program Zone Type**

- Installer Code then [-]
- Select Menu [4][1] (Zone Config)
- Select zone number > scroll with arrows or enter zone number, then [#]
- Select zone type > scroll with arrows or enter zone type, then [#]
- Repeat for other zones.
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

**5 Enter Installer Menu & Change Installer Code**

- Installer Code then [-]
- Select Menu [2][1] (Installer Code)
- Enter new Installer Code, [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

**4 Change the Master Code**

- Master Code then [-]
- Select Menu [2][2] (User Code). [#] to select U01 – User 01 Name
- Enter new Master Code, [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

**Common Zone Types**

0 – Instant; 1 – Handover; 2 – Delay 1; 3 – Delay 2; 11 – Keyswitch; 12 – 24hr Burglary; 14 – Chime Only; 15 – Not Used

**7 Program First Receiver**

- Installer Code then [-]
- Select Menu [7][1][1] (First Phone Number)
- [#] to select Receiver 1
- Enter phone number using number keys, then [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

**8 Program Second Receiver**

- Installer Code then [-]
- Select Menu [7][1][2] (Second Phone Number)
- [#] to select Receiver 1
- Enter phone number using number keys, then [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

**9 Program System Account Code**

- Installer Code then [-]
- Select Menu [7][1][4] (Subscriber ID Number)
- [#] to select Receiver 1
- Enter account code using number keys, then [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

**Communicator Format Types**

0 – Not Used            6 - SIA Fast  
1 – Contact ID        7 - SIA Slow  
4 – Domestic Dial  
8 – CSV-IP  
9 – Email

**10 Program Communicator Format**

- Installer Code then [-]
- Select Menu [7][1][3] (Transmit Format)
- [#] to select Receiver 1
- Select format > scroll with arrows or enter format type then [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then [#]

## 11 Program Open/Close Report

- Installer Code then [-]
- Select Menu [7][3][4] (Arm/Disarm Report Option)
- To enable open/close report, select Receiver 1 using arrows or press [1]; then [#]
- To disable open/close report, select No Report using arrows or press [0]; then [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#]

## 12 Program Entry Time

- Installer Code then [-]
- Select Menu [3][1][1] (Entry Time 1)
- Enter the time in seconds using the number keys then press [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#]

## 13 Program Exit Time

- Installer Code then [-]
- Select Menu [3][1][3] (Exit Time)
- Enter the time in seconds using the number keys then press [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#]

## 16 Perform Walk Test

- Main screen > enter Installer Code then [7][#]
- Zones will tick one by one as they are activated. Scroll using the arrows
- Press [-] to exit walk test mode

## 15 Program User Codes

- Master Code then [-]
- Select Menu [2][2] (User Code)
- Use arrow keys to select the user or enter user number, then press [#]
- Enter new user code, then [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#]

## 14 Program Additional Timers

- Installer Code then [-]
- Select Menu [3][1] (Timer)
- Select timer function such as [8] Auto Arm Time & [9] Auto Disarm Time
- Enter the time using the number keys (eg 20 Hour, 00 Min) then press [#]
- Press [-] until 'Confirm to Save Parameter Changes' appears then press [#]

## 17 Learn in a Wireless Device

- Main screen > enter Installer Code then [0][#]
- Enter device/zone number using the number keys then press [#]
- Enter the device RFID number as printed on the device then press [#] **OR** just press [\*] to enter auto-learn mode, tamper the device to learn, then press [#] to save
- Enter the RF Zone option  
**0 = not used**  
**1 = PIR/reed with magnet**  
**2 = external contact reed**
- Press [#]

## 18 Delete a Wireless Device

- Main screen > enter Installer Code then [0][#]
- Enter device/zone number using the number keys then press [#]
- Press [\*] to delete the device

Both the **RADION Wireless Receiver** or **WE800EV2 Keyfob receiver** **must be enabled in programming before learning keyfobs or wireless devices.**

## 19 Learn in a Wireless Keyfob

- Main screen > enter Master Code then [1][#]
- Select RF keyfob then [#]
- Enter keyfob/user number using the number keys then press [#]
- Enter the device RFID number as printed on the device then press [#] **OR** just press [\*] to enter auto-learn mode, press a button on the keyfob to learn, then press [#] to save
- Press [#] to save the new keyfob.

## 20 Delete a Wireless Keyfob

- Main screen > enter Master Code then [1][#]
- Select RF keyfob then [#]
- Enter keyfob/user number using the number keys then press [#]
- Press [\*] to delete the keyfob then [#] to exit from the user and then [-] to exit